

G2 - G3 - G4 Configuration Screens



1) REGISTRATION CONFIG

Registration screen is for describing aircraft accurately in data logging and also Reset the G23-4 to factory defaults.




2) GENERAL INFORMATION

General Info screen is for raw measurement for diagnostics of the G23-4 only. (Read Only Screen)



3) ENGINE CONFIGURATION

Engine Configuration screen is for setting up the engine info so the G23-4 works correctly for that airplane.

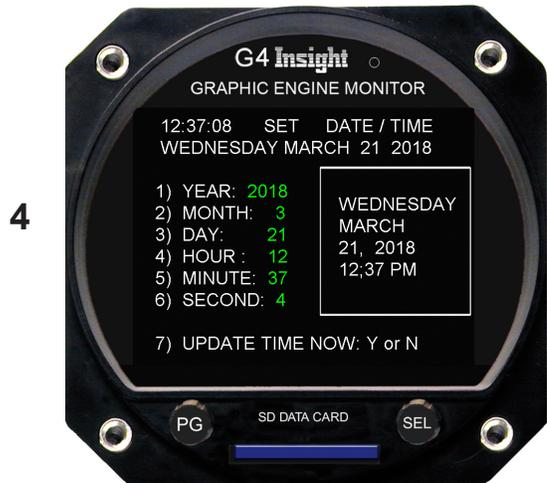

4) SET TIME / DATE

Date and Time screen is for entering the correct time and date in data logging.



5) K-FACTOR INITIALIZATION

K-Factor Initialization screen is for setting up the third party fuel transducer info so the G2,3-4 fuel flow works correctly.



6) MISC CONFIGURATION

- 1) Fuel flow GPS interface setting
- 2) Dynamic G-Force hard landing threshold trigger setting
- 3) Permits the user to select either Fahrenheit or Celsius
- 4) Permits the user to use a second slaved display

G3 and G4 Configuration Screens

MISC Configuration screens are accessible only on the ground.

Setup mode accessed by rebooting instrument with PG button held in.

There are SIX configuration screens. -

1) REGISTRATION CONFIG

Registration screen is for describing aircraft accurately in data logging and also Reset the G23-4 to factory defaults.

2) GENERAL INFORMATION

General Info screen is for raw measurement for diagnostics of the G23-4 only. (Read Only Screen)

3) ENGINE CONFIGURATION

Engine Configuration screen is for setting up the engine info so the G23-4 works correctly for that airplane.

4) SET TIME / DATE

Date and Time screen is for entering the correct time and date in data logging.

5) K-FACTOR INITIALATION

K-Factor Initialation screen is for setting up the third party fuel transducer info so the G2,3-4 fuel flow works correctly.

6) MISC CONFIGURATION

MISC Configuration screen

- 1) Fuel flow GPS interface setting
- 2) Dynamic G-Force hard landing threshold trigger setting
- 3) Permits the user to select either Fahrenheit or Celsius
- 4) Permits the user to use a second slaved display

If you have a G3, G4 single, or G4 twin and update to the latest version your temperature measurements will remain in Fahrenheit unless you configure your instrument for Celsius. So if you wish to keep using Fahrenheit do nothing further.

YOUR CONFIGURATION SCREENS MAY OR MAY NOT BE CORRECT

DEPENDING HOW THE UNIT WAS PURCHASED AND INSTALLED!

ADJUSTMENT INSTRUCTIONS:

Use PG knob to select screen

Push SEL to highlight line to yellow

Turn SEL to adjust

Push PG to save

Push SEL to highlight other lines

Turn SEL to adjust

Push PG to save

Push SEL to highlight down to "SAVE CONFIG"

Turn SEL to highlight YES in GREEN

Push SEL to SAVE change

